

Nugget Ice Machine Cleaning (DRAFT 8c September 14, 2018)

This ice machine has an automatic clean alert function. The control will indicate CL in the display, approximately every six months with normal use, reminding you to clean your unit. When CL is displayed, ice production will continue. Depending on water conditions, more frequent cleaning may be necessary. Cleaning removes lime scale, other mineral deposits, and sanitizes the machine. Poor ice quality and reduced ice output are signs that cleaning is necessary. If the machine consistently requires more frequent cleaning, consult a plumber to test the water quality and recommend appropriate treatment.

Under normal conditions cleaning should be done when the display shows CL. You may initiate a cleaning cycle at any time by pressing and holding the clean button for 5 seconds. 1 will appear in the display indicating the start of the cleaning process.

You may override CL in the display without cleaning by pressing and holding the up, down, & light button for 10 seconds. ICE will scroll in the display and the cleaning reminder (CL) will be reset for another approximate six month cycle. Failure to clean may reduce the quality and quantity of ice produced.

Required for cleaning:

- Hose and funnel – provided with unit
- Bucket and cleaning sponge
- Clean water
- SafeCLEAN Plus™ Cleaner (Part No. 80-55266-00) – included with unit

- Need more cleaner? Visit u-line.com.


CAUTION

Use only SafeCLEAN Plus Cleaner. Use of any other cleaner may damage the finish of the evaporator and will void the warranty.

Follow safety and handling instructions printed on the SafeCLEAN Plus™ bottle.


NOTICE

- **For 3 class models only:** the water filter must remain in place during the cleaning process

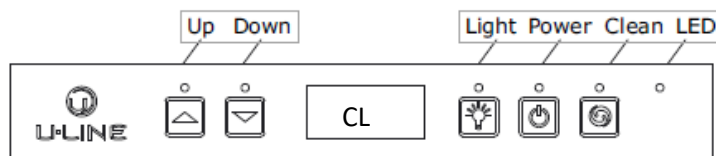

Cleaning Process (approximate time: 40 minutes)

1. Press & hold Clean button for 5 seconds
 - a. 1 will appear in the display
 - b. Remove access shield
 - c. Remove all ice in bin
 - d. Remove any ice protruding from the ice dispenser tube.
 - e. Insert the end of the cleaning tube into the ice dispenser; slowly pour in approximately 1 quart of hot water. This will melt ice inside the dispenser tube. It is normal for some water to flow out of the ice dispenser tube and exit from the vent tube while pouring. Omit this step if no ice is in the ice dispenser tube.

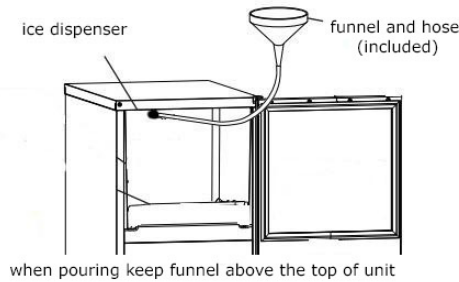

Drawing/image of back of ice machine labeling ice dispenser tube, vent tube, & filter

2. Press & release Clean button
 - a. 2 will appear in the display
 - b. Mix 4 ounces SafeCLEAN Plus™ with 2 quarts of water
3. Wait until 3 appears in the display
 - a. Using the funnel & hose, slowly pour 3/4 of the cleaning solution into the dispenser tube. Air and some water will exit the vent tube. Remove cleaning tube.
 - b. Press & release Clean button
4. 4 will appear in the display
 - a. The machine will circulate the solution, cleaning and sanitizing the internal components, for approximately 20 minutes.
 - b. While the machine is circulating the cleaning solution, use the remaining cleaning solution and a sponge to wipe down the inside of the ice bin and scoop. Rinse thoroughly with clean water.
5. When 5 appears in the display, 3 soft audible tones will sound, indicating the cleaning phase is complete.
 - a. Using the hose and funnel, slowly pour 1.5 quarts (48 oz.) of clean water into the ice dispenser tube. Air and some water will exit the vent tube.
 - b. Press & release the Clean button
6. 6 will appear in the display
 - a. Reinstall shield and close door – no further action is required
 - b. The machine will circulate water and perform a series of final rinses for approximately 15 minutes

The unit will resume making ice – indicated by 3 soft audible tones and ICE scrolling in the display.